
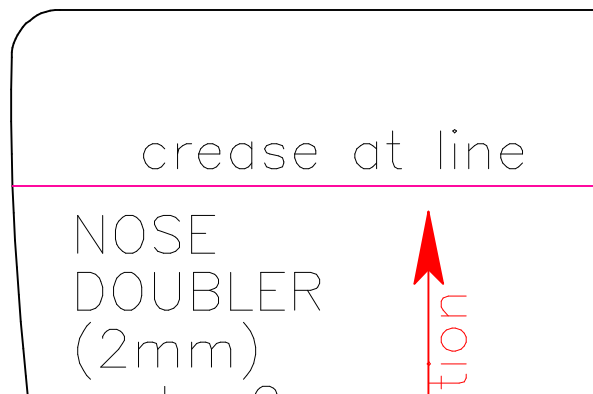
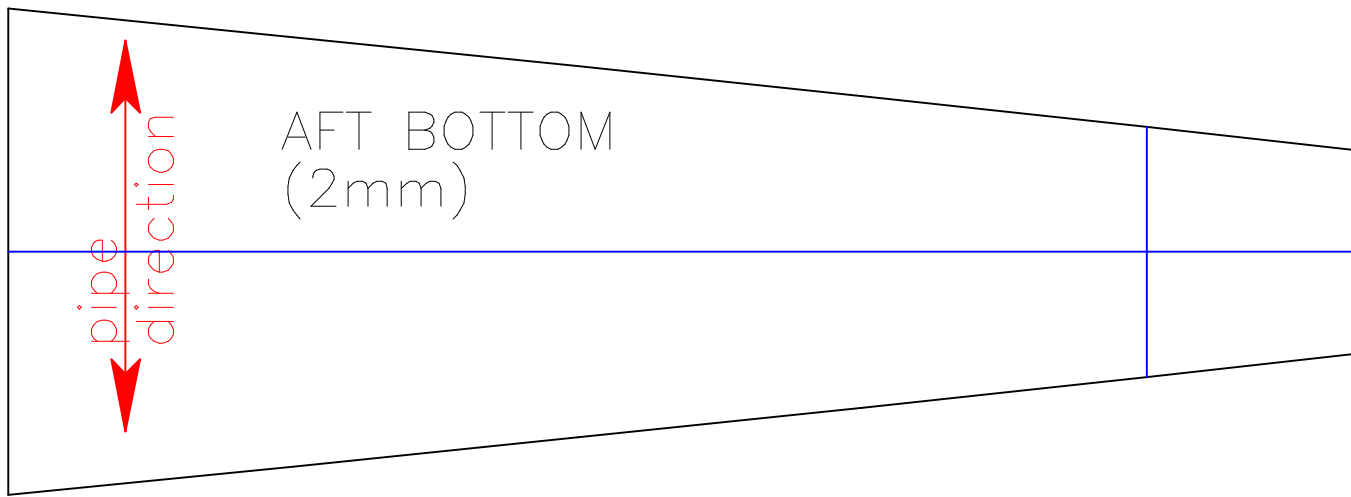


2 mm PARTS

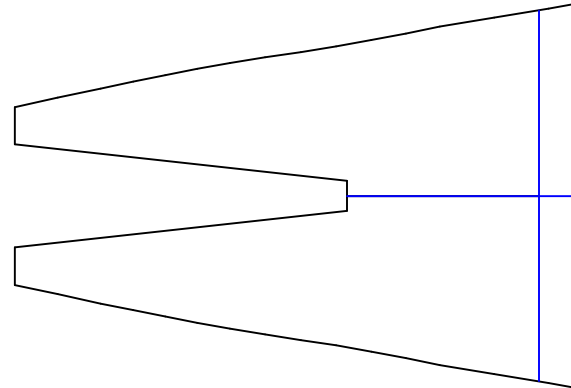


AFT TOP (2mm)

pipe
direction

Crease (don't cut)
along each inside pipe
for easy forming.

FWD BO

S

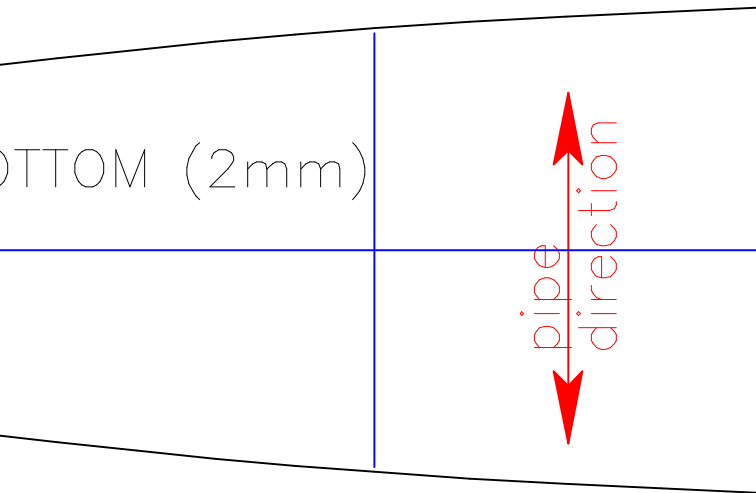

OTTOM (2mm)

pipe
direction

W

This t
Flip t
for R

TOP


par line



ING TEMPLATE (2mm)

template is for the LEFT wing.
template over (text side down)
RIGHT wing outline.

make 2



FIREWALL DOUBLER (2mm)



Glue behind firewall for additional support.
Crease (don't cut) along each inside pipe
for easy forming.

WING CENTER DOUBLER, BOTTOM (2mm)


Crease line

WING CENT



Make 2

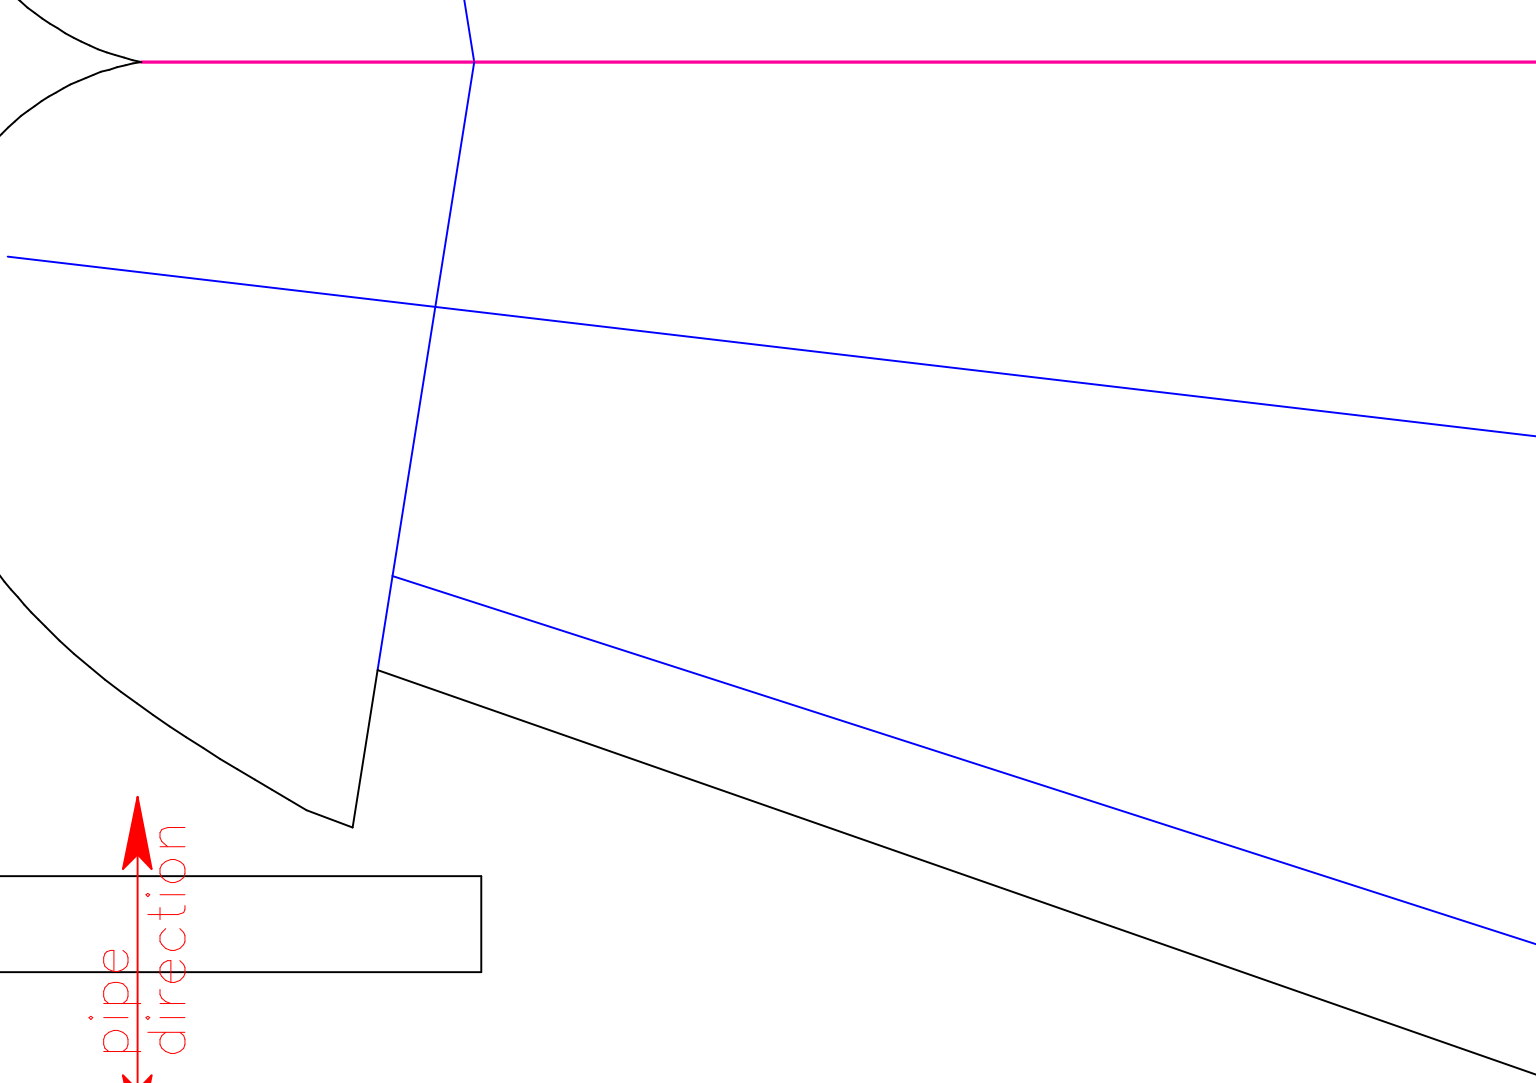

pipe
direction

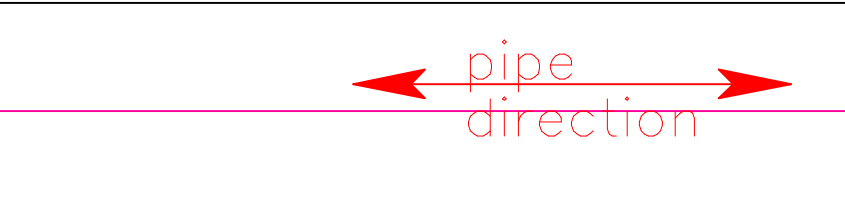


ATER DOUBLER, TOP (2mm)

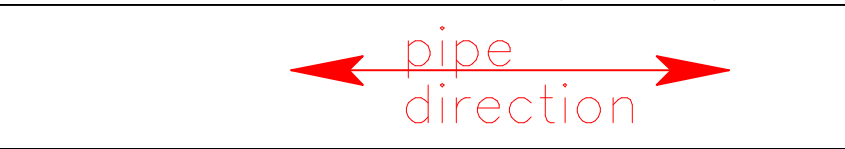


fold line



spar line

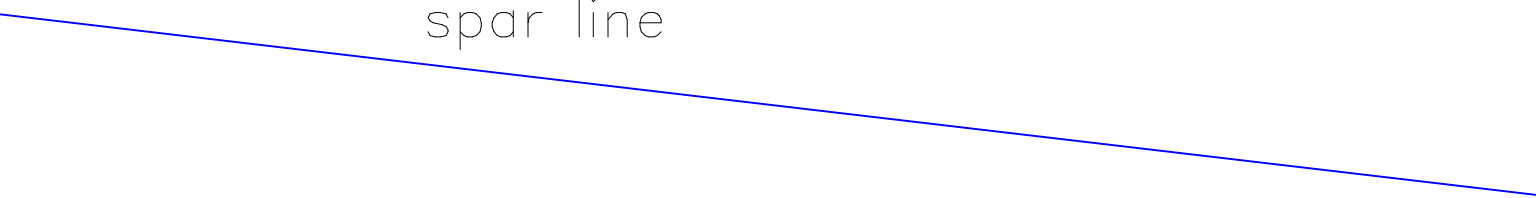

BOTTOM

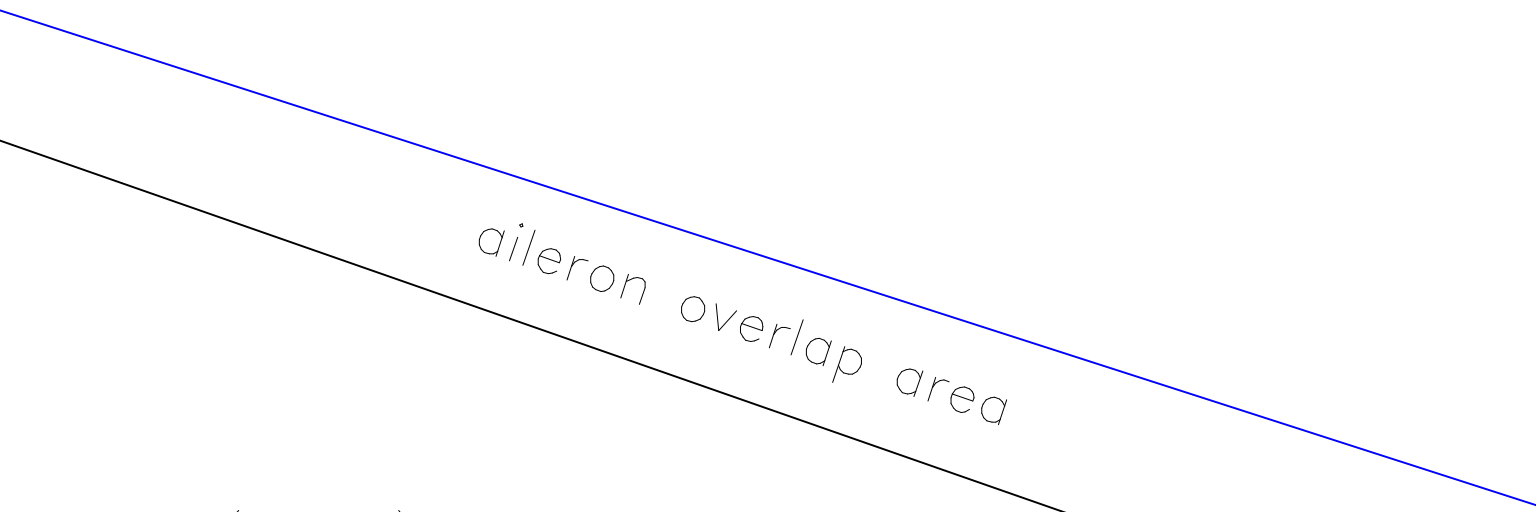

aileron overlap area

Scale (inches)

