



4 mm PARTS

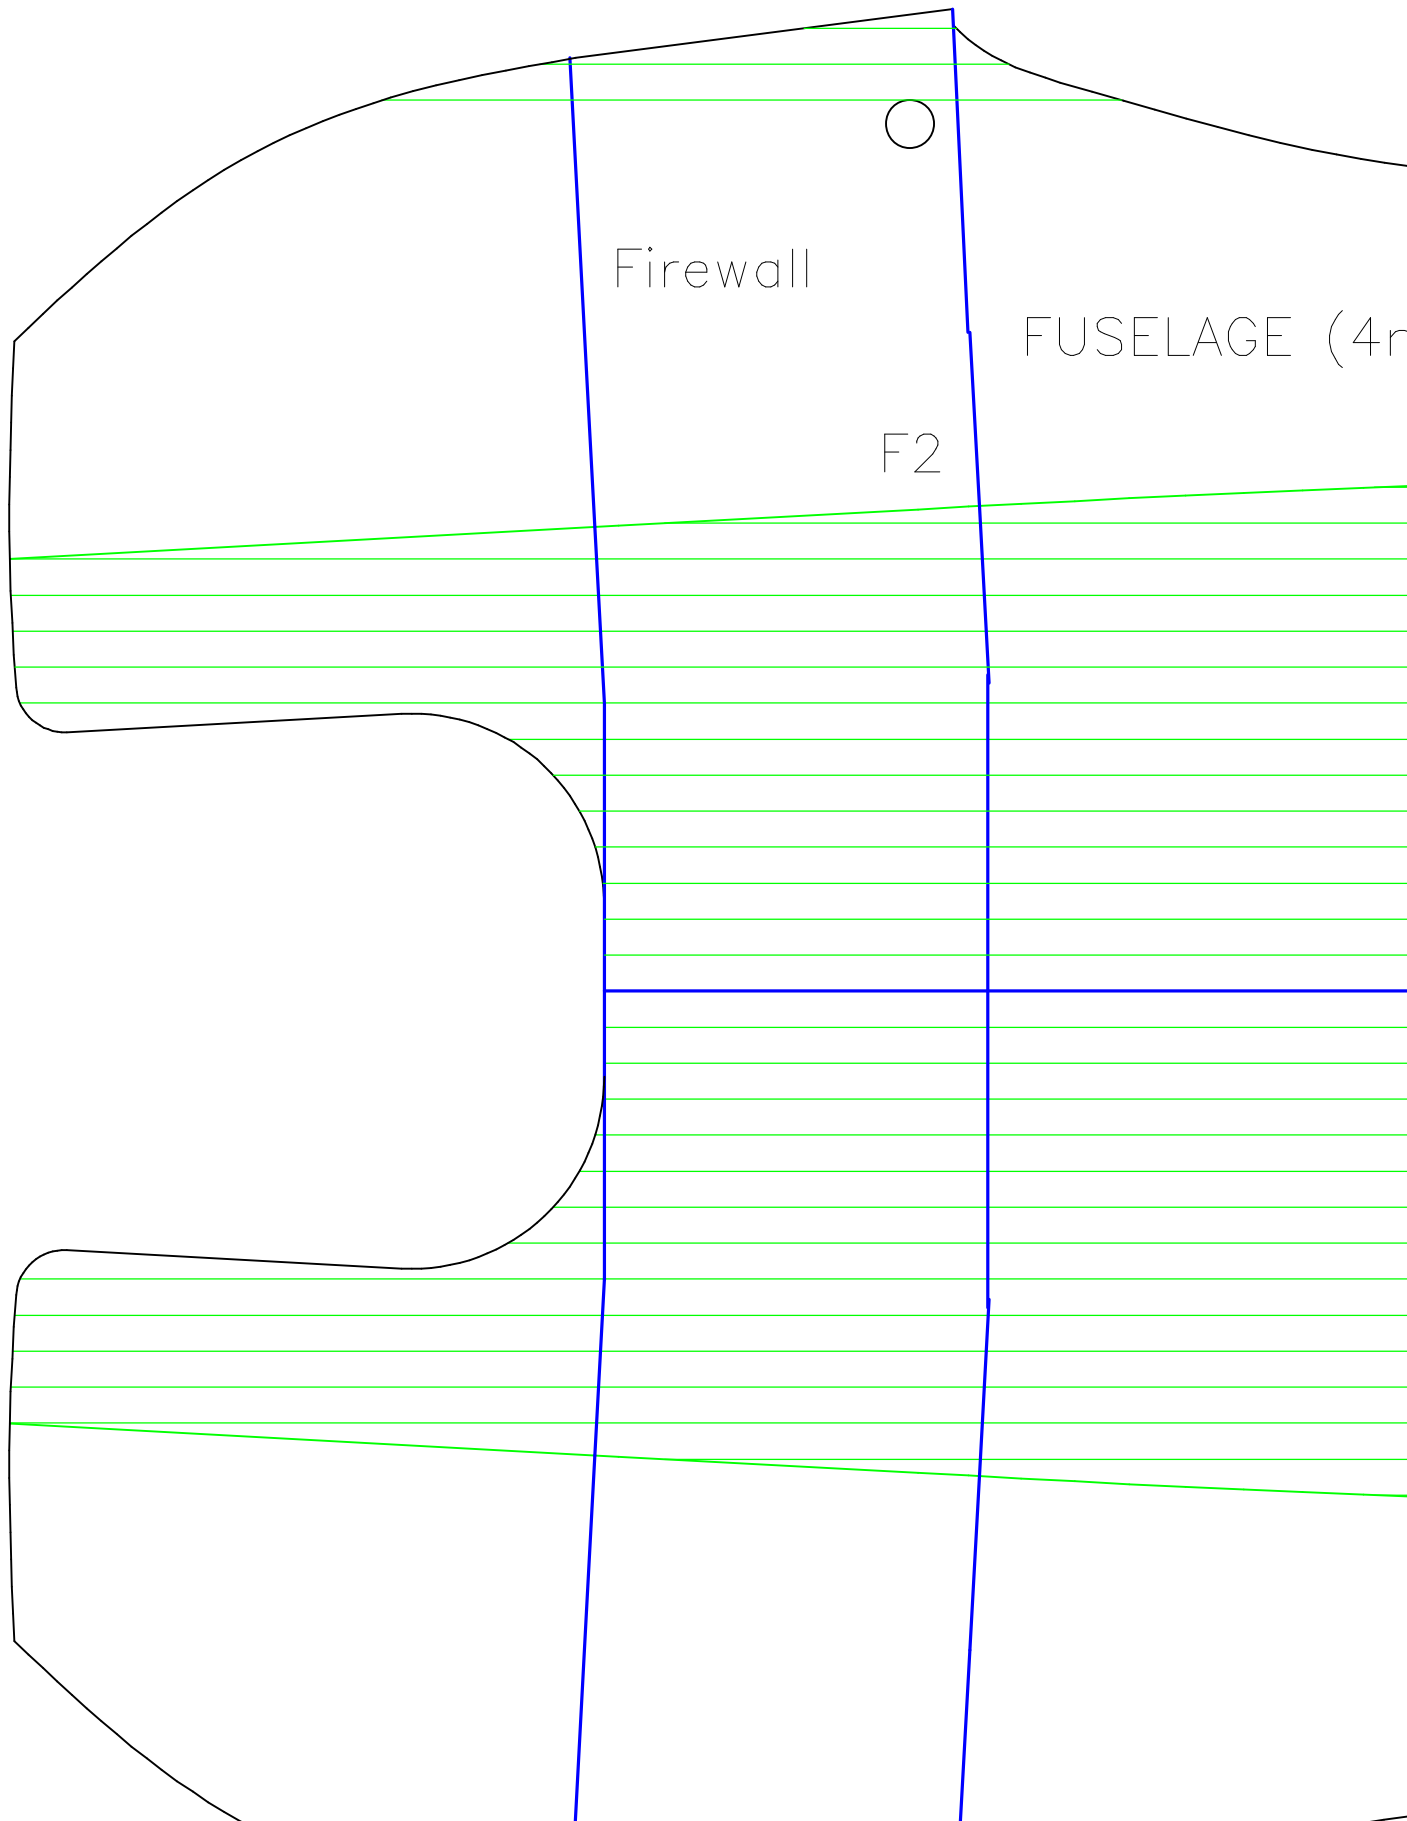


Firewall

FUSELAGE (4r)

F2

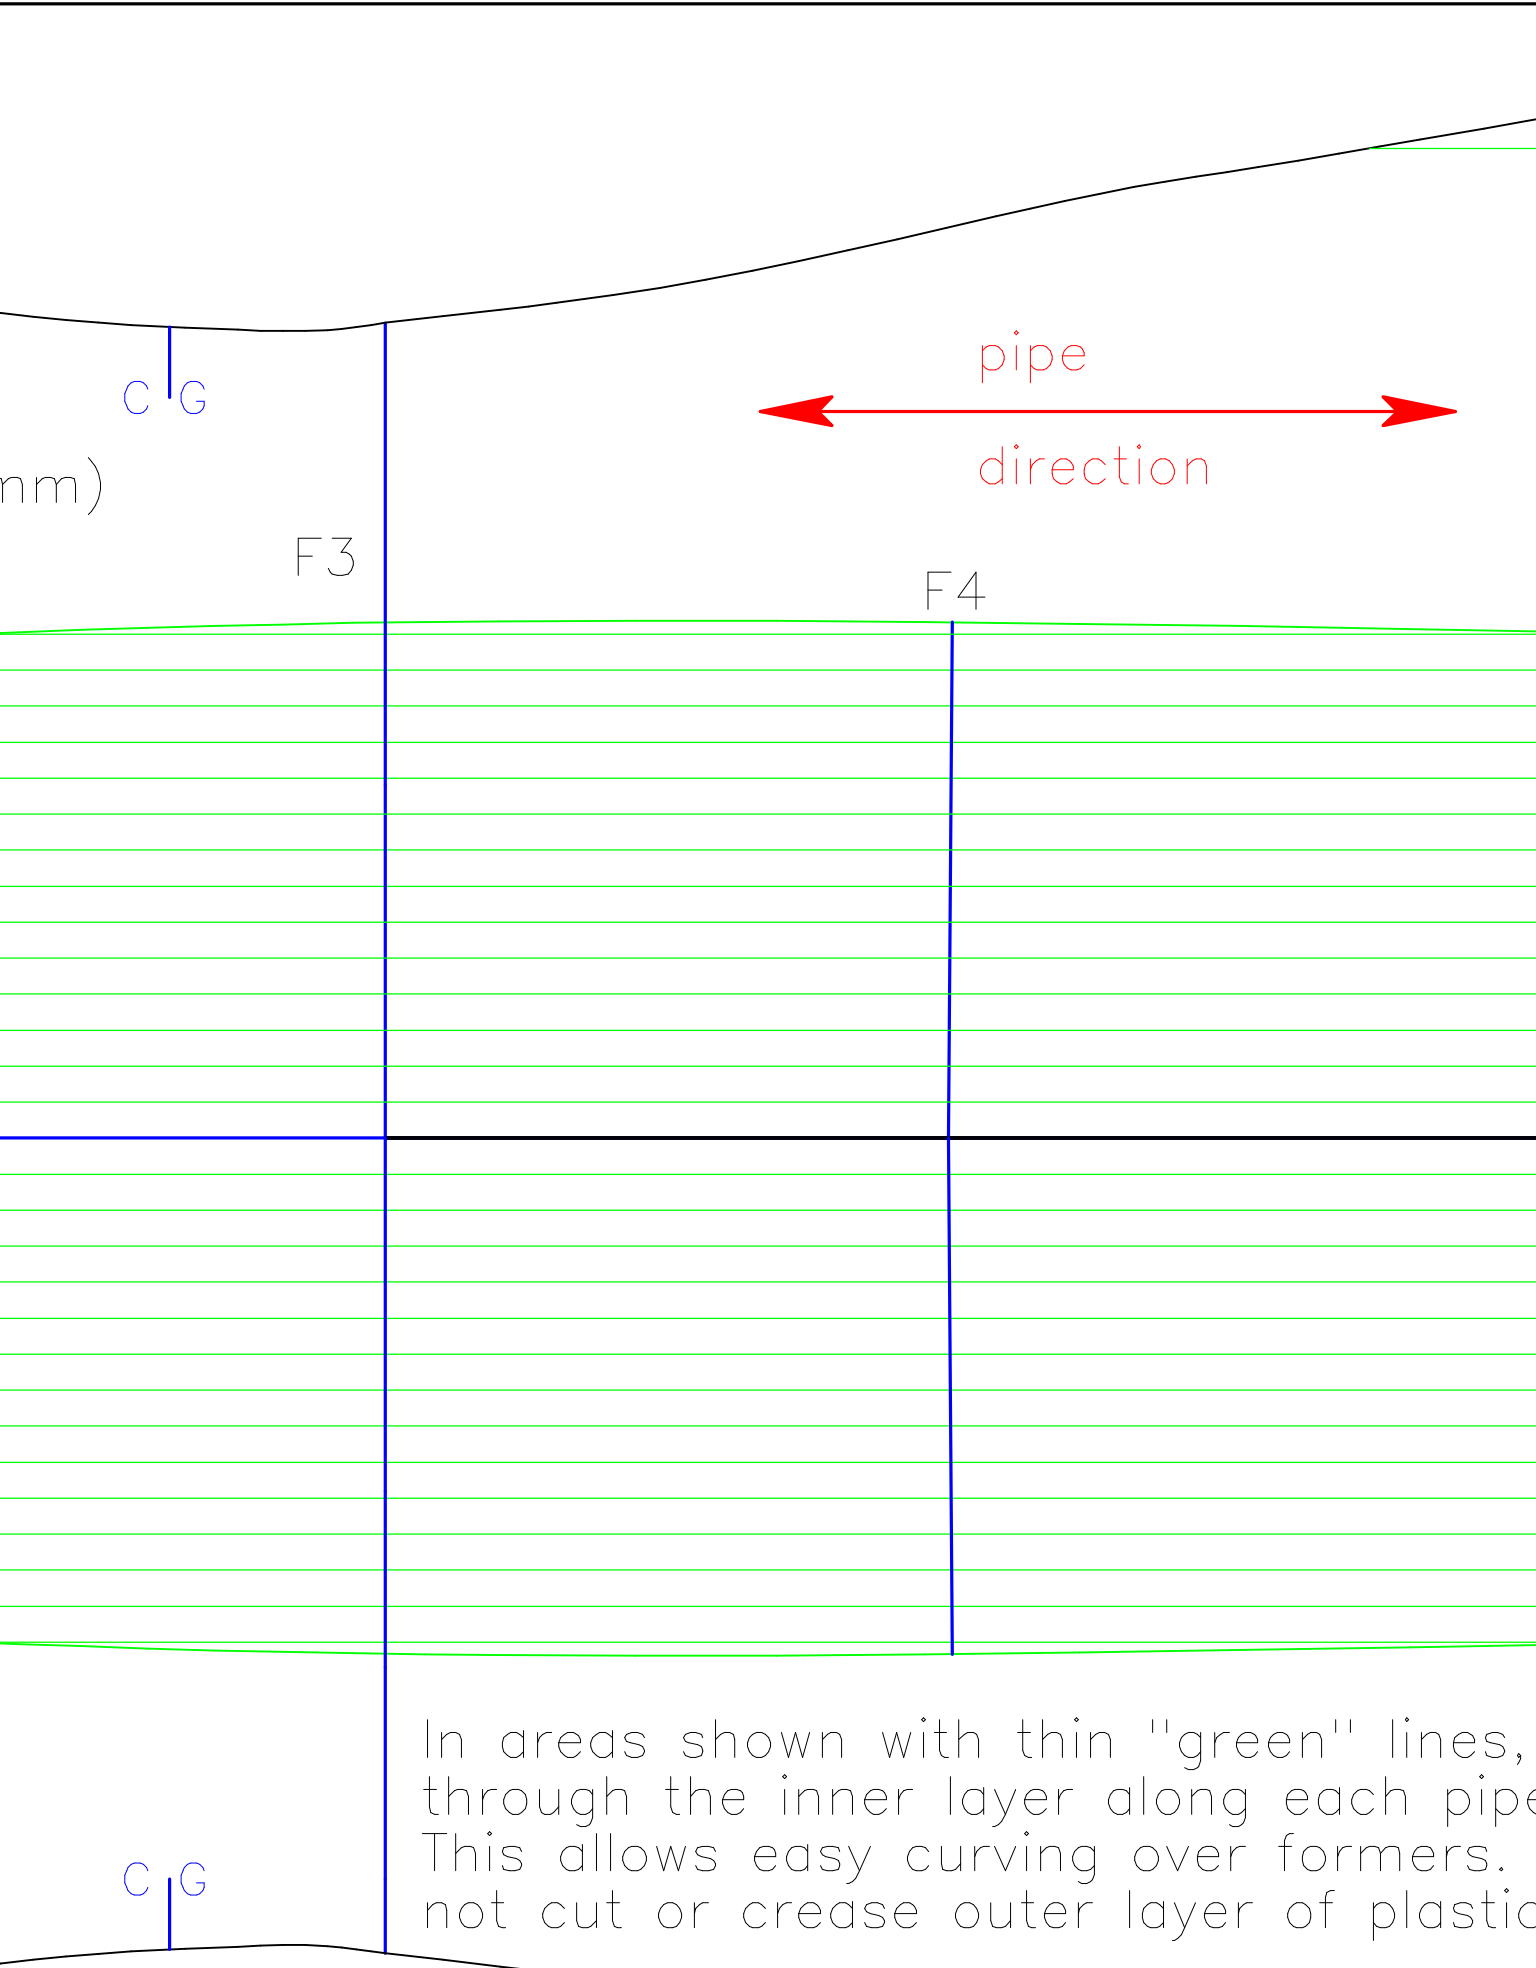

In areas shown with thin "green" lines, through the inner layer along each pipe. This allows easy curving over formers. not cut or crease outer layer of plastic

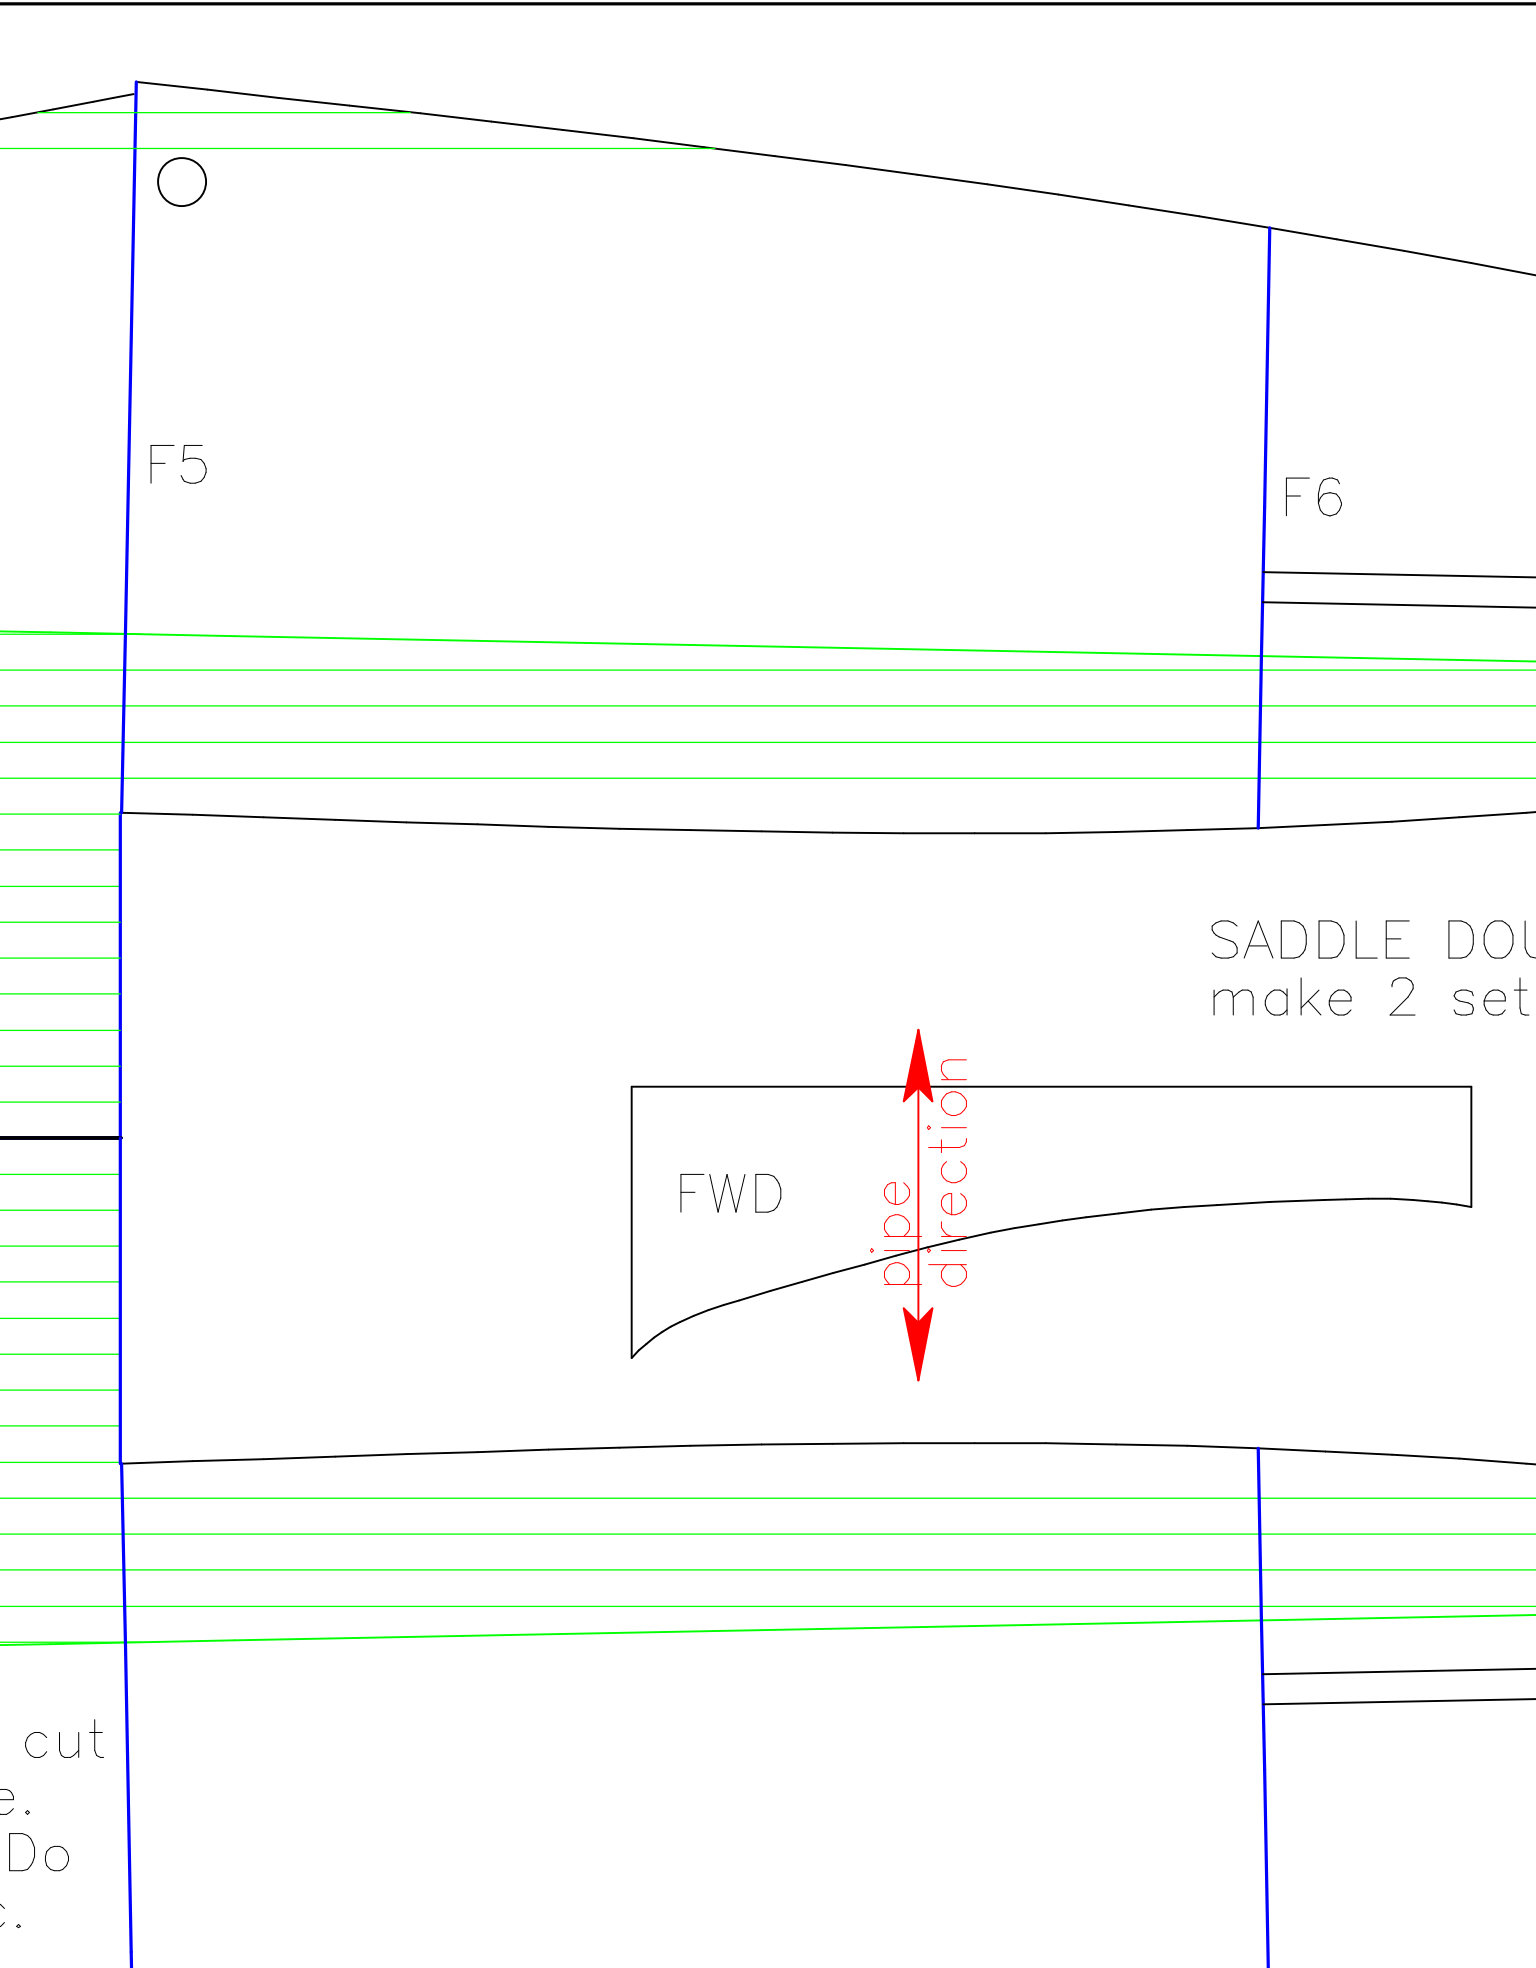

F5


F6

SADDLE DOU
make 2 set



FWD




pipe
direction

cut
e.
Do
s.

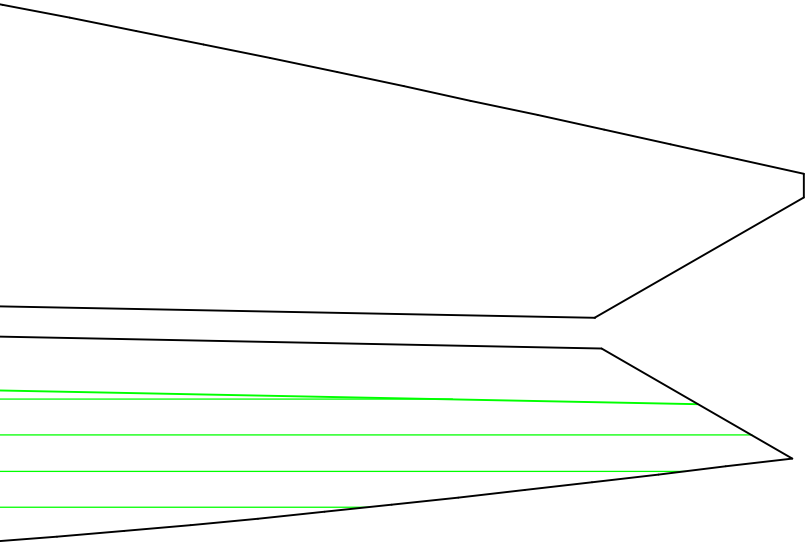


COUPLERS (4mm)
S

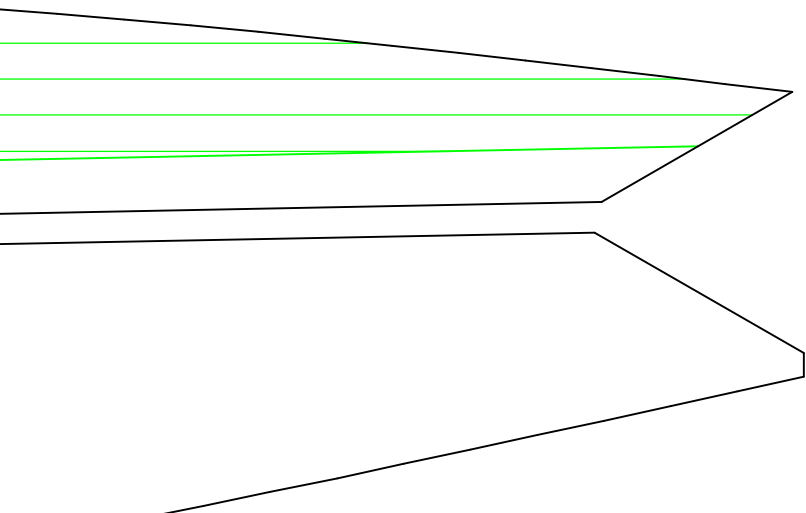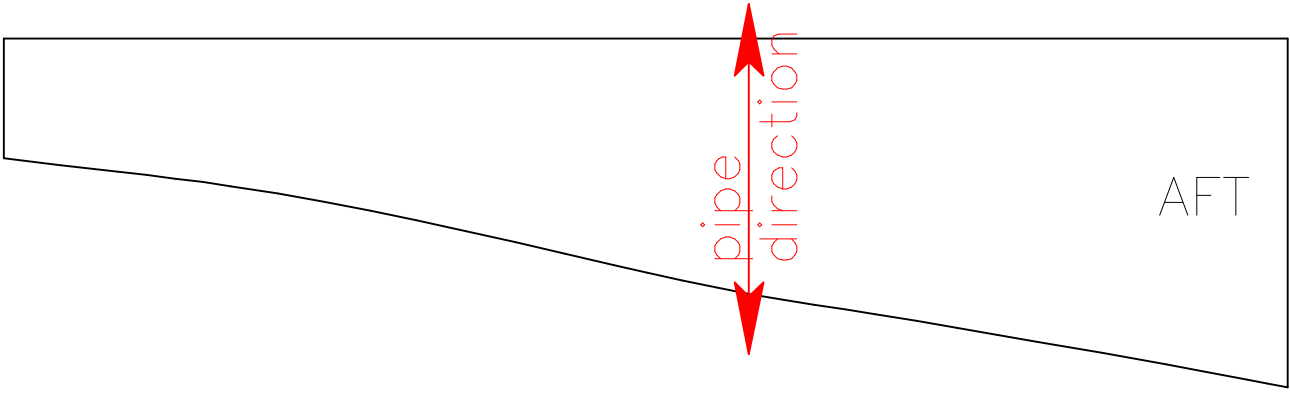

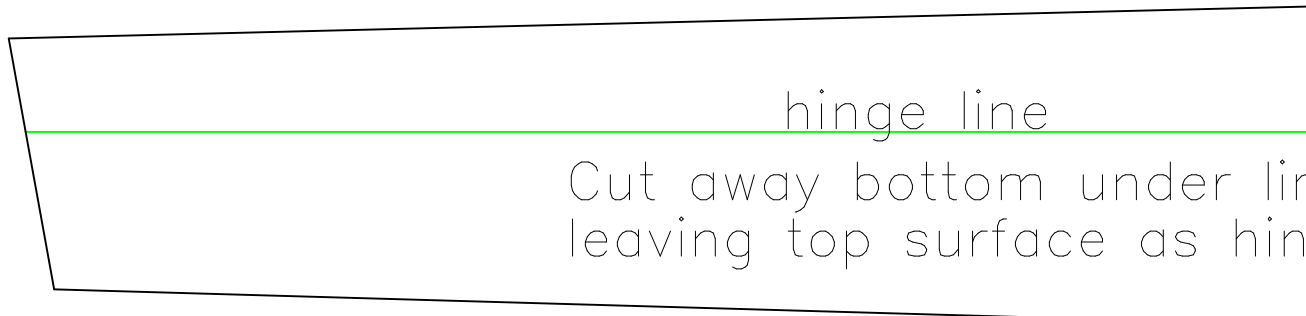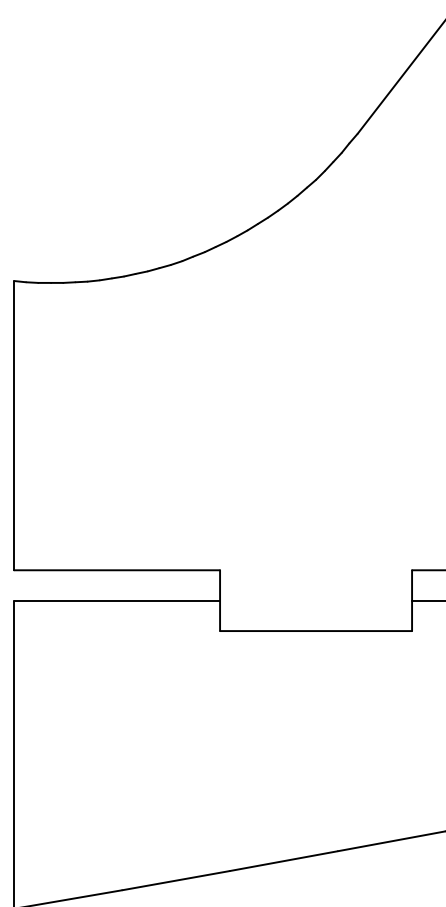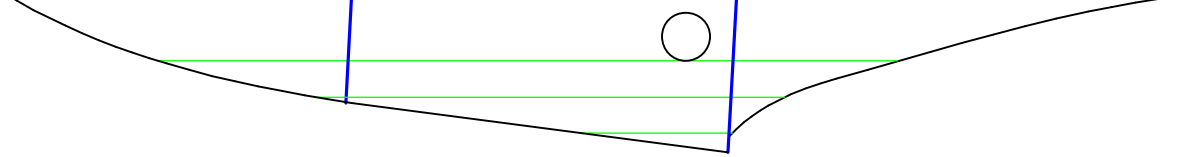

hinge line

Cut away bottom under line
leaving top surface as hinge

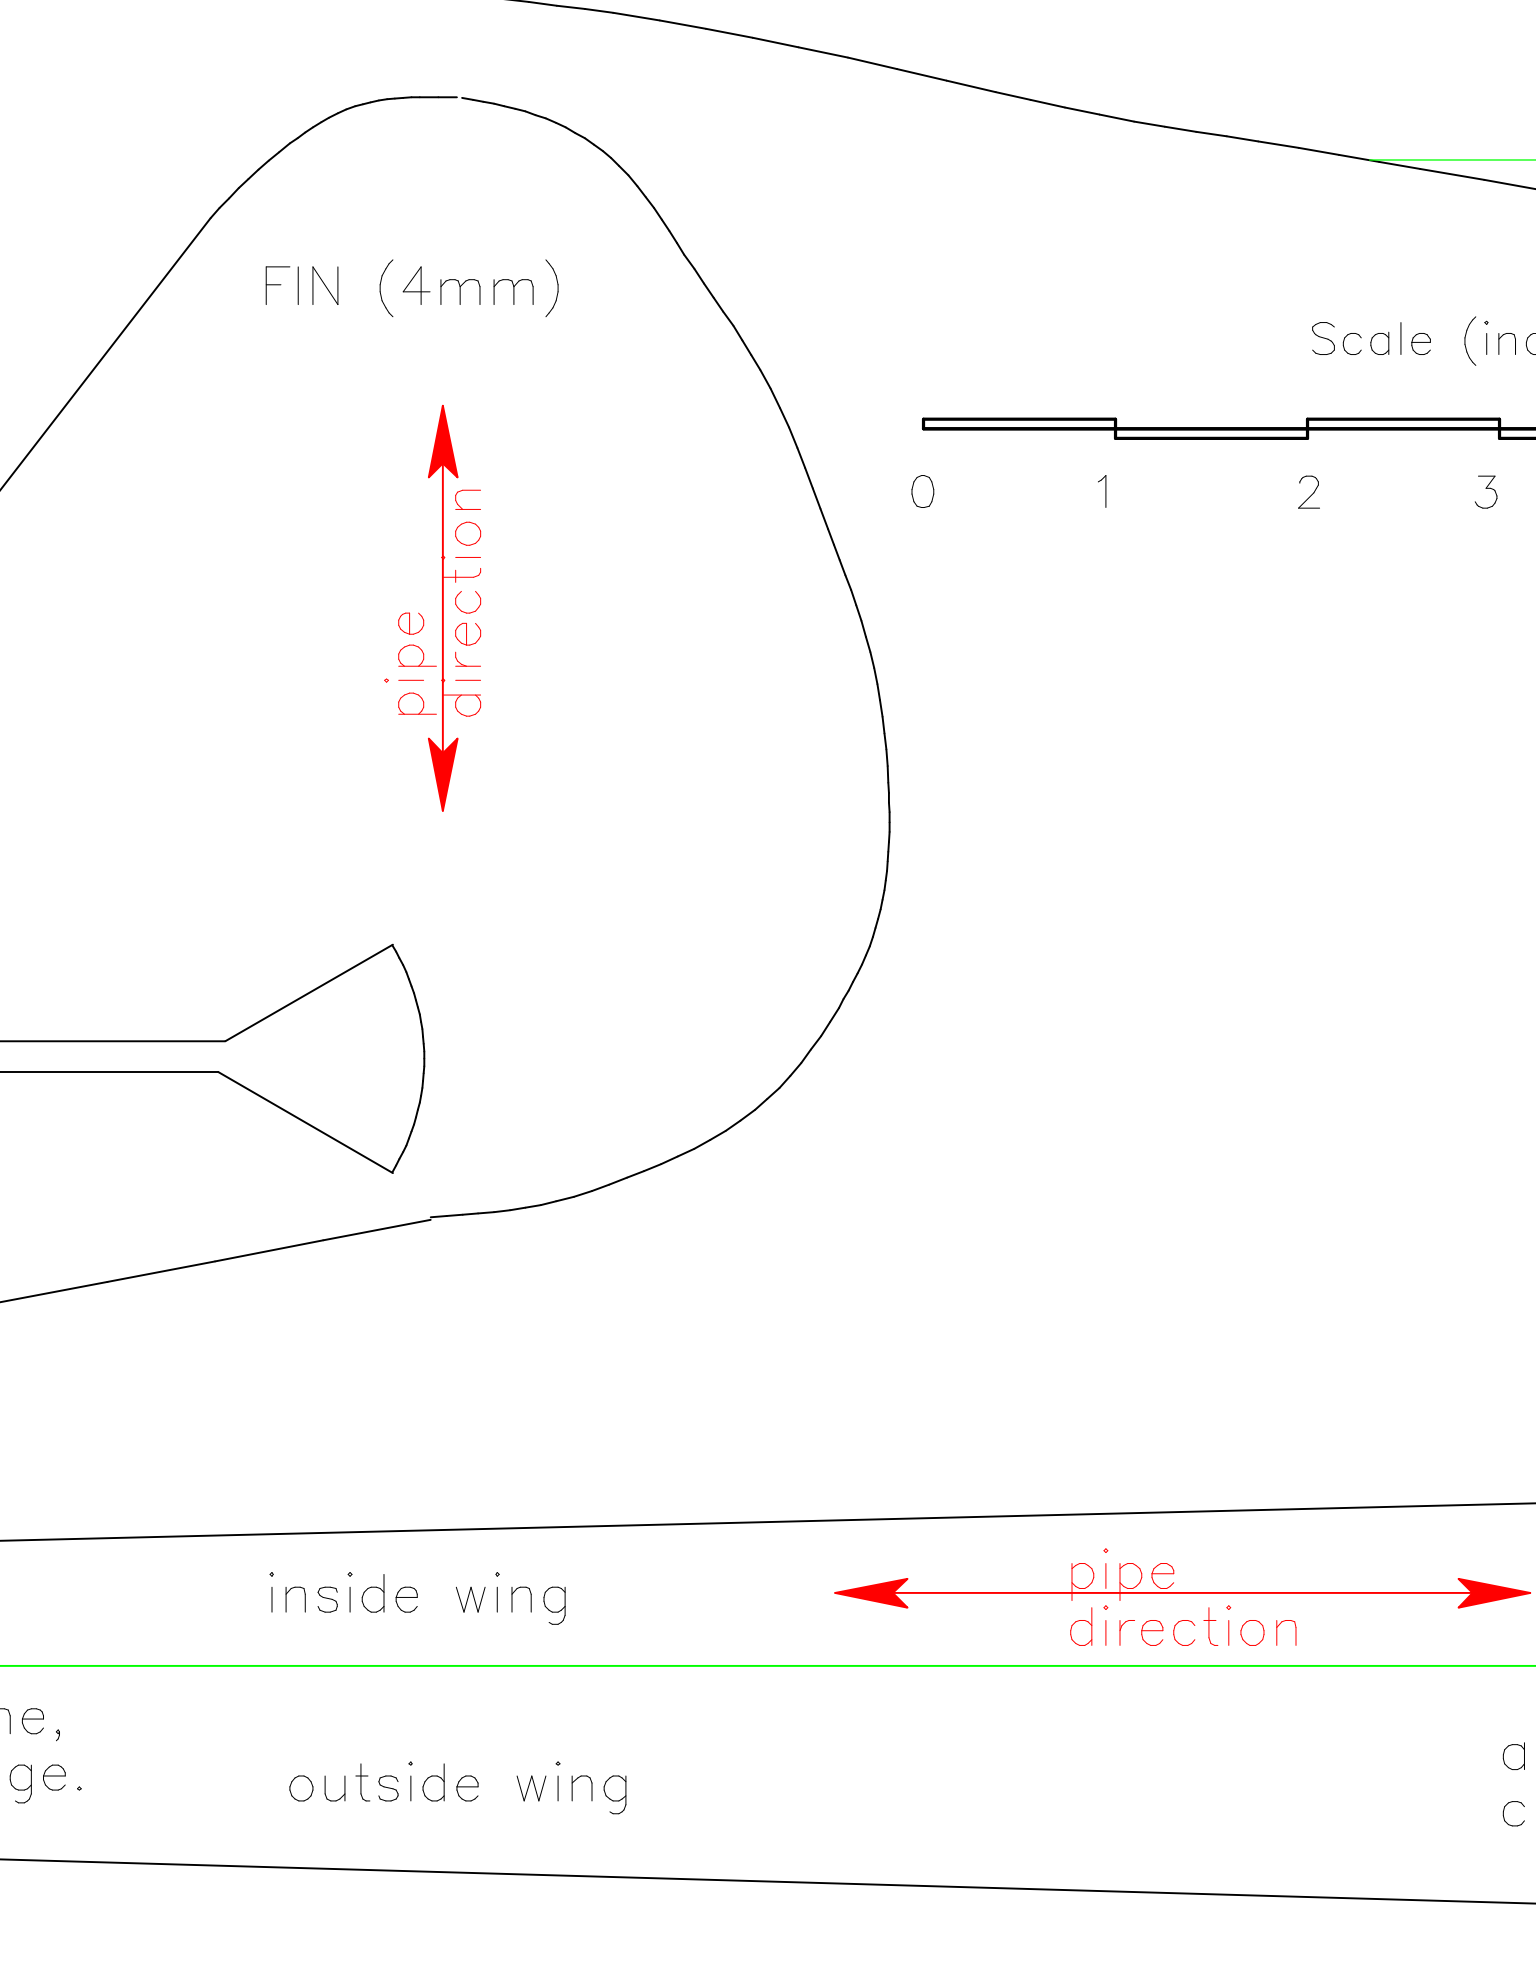

FIN (4mm)

pipe
direction

Scale (inches)

0 1 2 3


inside wing

pipe
direction

outside wing

ne,
ge.

d
c

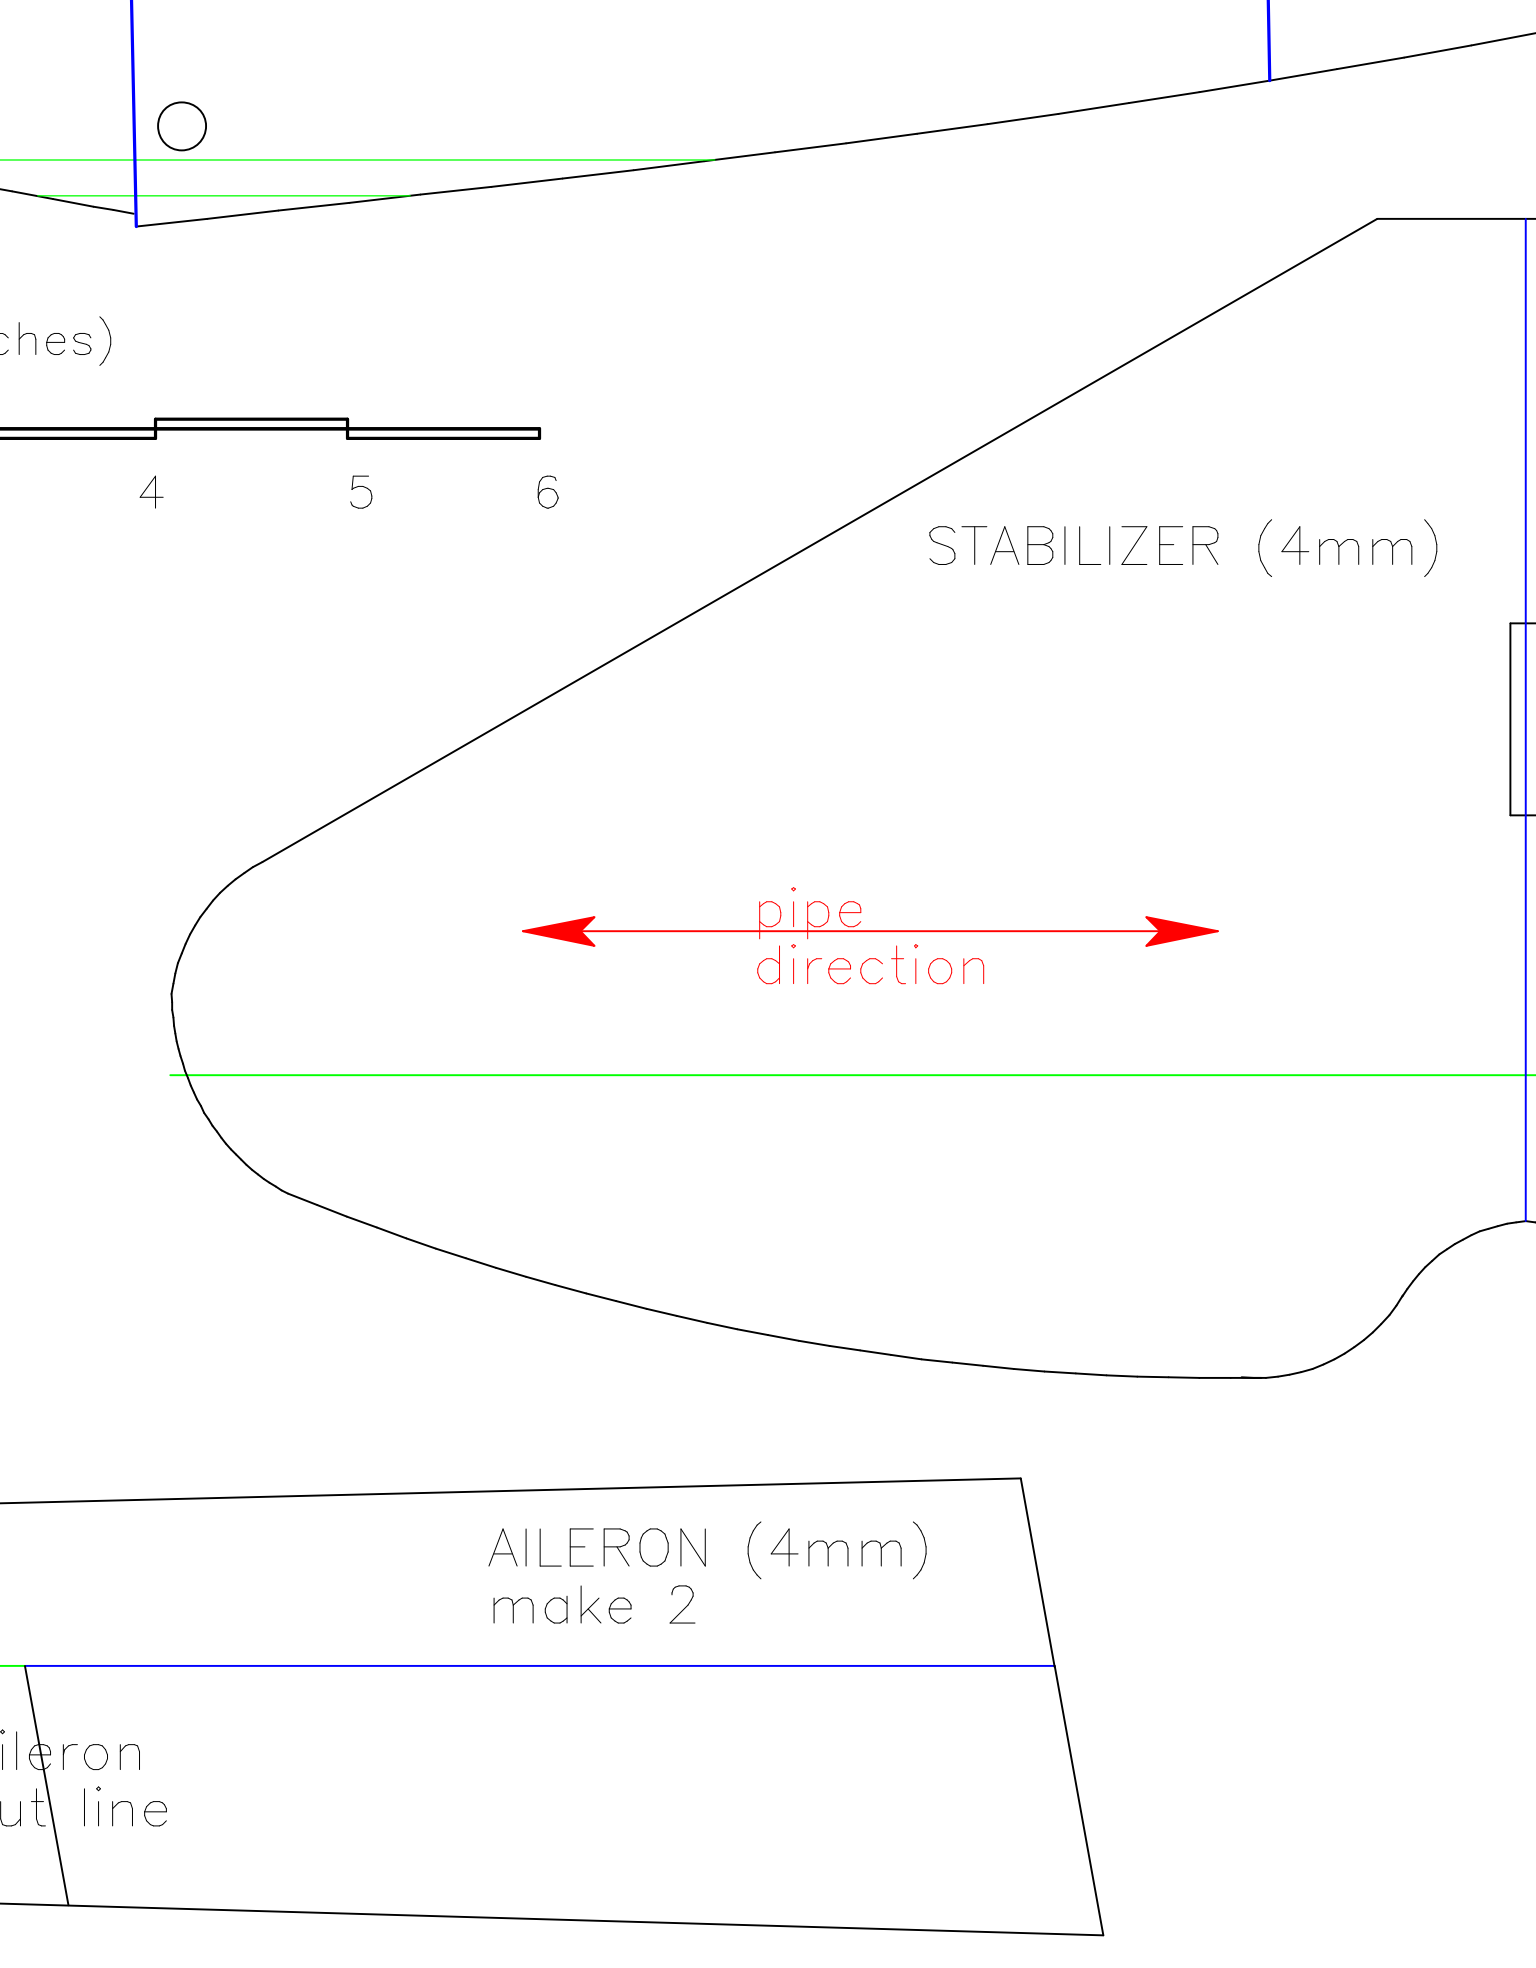

ches)

4 5 6

STABILIZER (4mm)

pipe
direction

AILERON (4mm)
make 2

ileron
ut line

